

Charcoal Grills

Charcoal grills consist of a charcoal box, 4 legs, and grilling grate with adjustable grate holders. Also, if ordered, charcoal riser option with 2 inch legs, this keeps the charcoal 2 inches above the bottom of the box.

USEAGE INSTRUCTIONS

- 1) Charcoal is placed in the box by lifting the cooking grate off the grate holders. Place charcoal I box or on charcoal riser. Light the charcoal pile, spread out evenly when completely lit.
- 2) Adjust grate height to desired temperature.
- 3) When done cooking, lift cooking grate out as before lighting. Clean charcoal ashes with a small metal scoop and discard.